



Tuner Fuse Repair

Symptoms:

Tuner does not turn on when powered

LED Display does not illuminate

Cannot communicate with Tuner through HyperTerminal

Procedure:

Remove Tuner Case Screws. 8 total 4 on each side.



Once the Tuner case is open. It should look like below. You will want to test the fuse with a multimeter on continuity check mode.

We are looking for a open circuit between one end of the fuse to the other. If you do have a open circuit between the fuse terminals. Replace the fuse with a [F2587CT-ND](#). You should be able to find these from www.Digikey.com.